


Content

8 x Wooden dowel 

2 x Cam-bolt 


2 x Double bolt 

6 x Cam-lock 


4 x Angle 

8 x Wood screw 

1 x left side



1 x right side

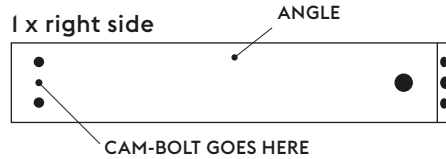

1 x front piece



1 x back piece



SHORT DOWELS

LONG DOWELS

Mounting

1. Insert the wooden dowels where they belong: 2 short ones in each end of the front piece and 2 long ones in each end of the back piece.


2. Screw one cam-bolt into each side piece. Then put the side pieces and the back piece together.

3. Place the double bolts in the front piece and attach the side pieces.

4. Place the cam-locks in their holes and rotate until they lock the bolts.

5. Attach the angles to your Plinth using wood screws and then screw it to the bottom of the cabinet.

NOTE! If you are installing your Plinth under a Metod cabinet - make sure that the Plinth is mounted so that it protrudes about 1 cm behind the frame (aligning with the back edges of the Superfront sides).

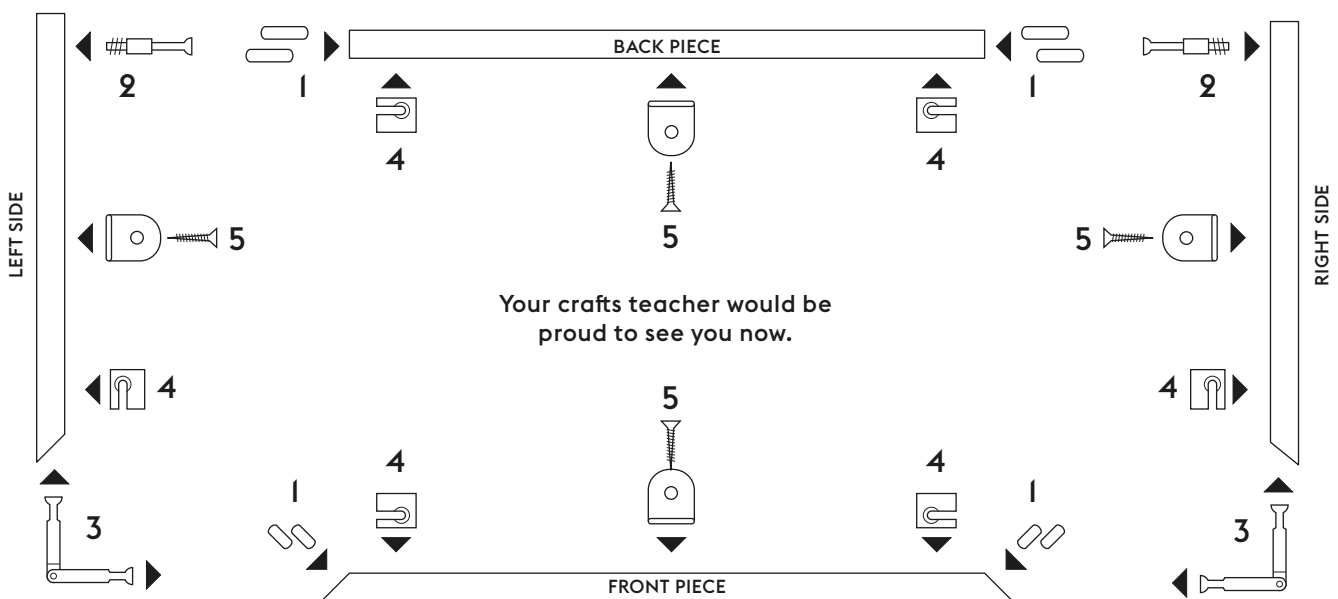

Safety!

Be sure to always follow the safety instructions that apply to your furniture. Always secure the cabinet to the wall. This also applies to low cabinets where the weight distribution changes drastically when the fronts open. Especially in the case of solid quality fronts as ours. Use the anchor brackets that come with the Ikea cabinet.