


### Content

16 x Cam bolt




16 x Cam



38 x Wooden dowel 8x35mm



748x620x355mm

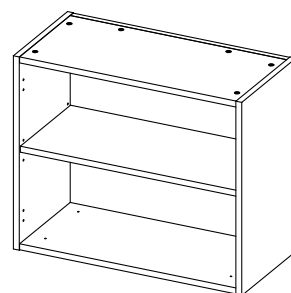


Shelf support pins are supplied with the shelf.


### Assembly Instructions

1. Make sure you have a sufficiently large floor area where you can lay out all cabinet components in an organised manner.
2. Place the components on a soft surface, such as a rug or protective cardboard, to prevent damage to both the floor and the cabinet parts.
3. We recommend that the cabinet is assembled by two people to ensure a safe and smooth installation.
4. (A) Place the cabinet back panel on the protective surface with the cam lock holes facing downwards (so they will be on the outside of the cabinet).
5. Insert the wooden dowels into the pre-drilled dowel holes in the back panel.
6. Carefully screw in the cam bolts, making sure they are straight. If using a power screwdriver, set it to the lowest torque setting.
7. (B) Leave the back panel on the protective surface. Carefully lower the top panel into position.
8. Insert the cam locks and tighten them.
9. (C) Next, lower the bottom panel into the back panel in the same way. Insert the cam locks and tighten them.
10. Carefully stand the partially assembled cabinet upright on one of its short sides. Ensure that you have enough space and take care to keep all parts properly aligned and supported.
11. (D) Insert the wooden dowels and cam bolts into the pre-drilled holes in the side panel.
12. (E) Lower the side panel into position, insert the cam locks, and tighten them.
13. (F) Carefully rotate the cabinet 180° to prepare for attaching the second side panel.
14. Insert the wooden dowels and cam bolts into the pre-drilled holes in the second side panel. Position the side panel, insert the cam locks, and tighten them.
15. (G) Assembly complete!


A.

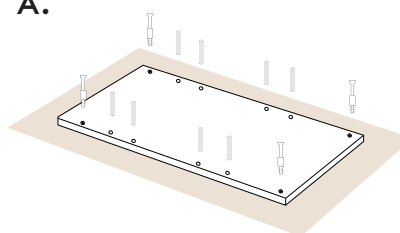


B.

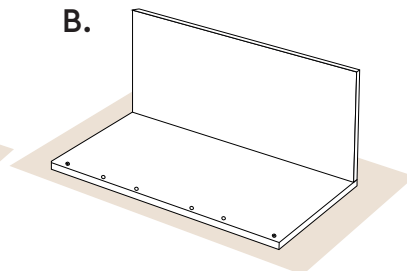


C.

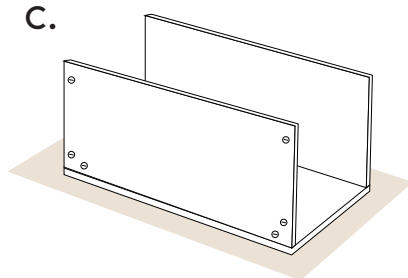


D.

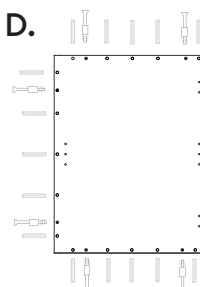

E.

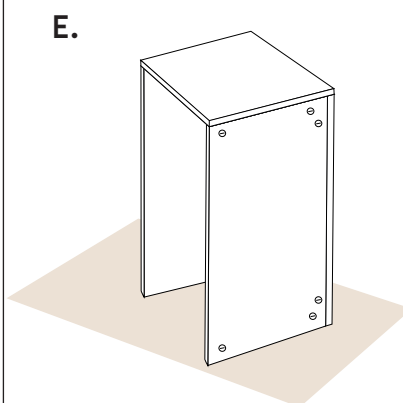

F.

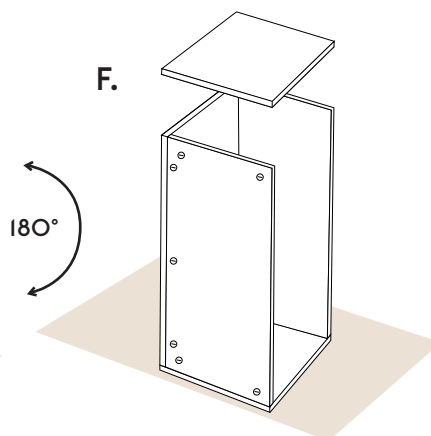

G.

