


Content

Screw
(The number varies depending on the size of the side)

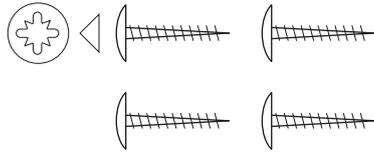

3M wet wipe



MountPads 40x25mm
(The number varies depending on the size of the side)



1. Clean the surfaces.

Use the attached 3M wet wipe to clean the surfaces of the cabinet sides and the Superfront sides.

2. Attach the MountPads on the frame.

Attach one MountPad in each corner of the cabinet side and spread the rest evenly along the front and rear edge, as shown on the back page.

NOTE! Do not remove the cover paper from the MountPads yet!

3. Tilt the side in place.

Do this step first without removing the cover paper on the MountPads so that you get the hang of it before you do it for real.


Place the side on the floor, as shown in the picture. The side should align with the cabinet's back edge and protrude about 18mm from the front edge. Slowly tilt the side upward until it touches the MountPads. Make sure it ends up in the right position.

PRESS HARD OVER EACH MOUNTPAD FOR AT LEAST 30 SECONDS. This is important because the adhesive in our MountPads cure under pressure.

4. Screw from the inside - press from the outside.

Place the screws as shown: two at the top, two at the bottom and the rest evenly spread in between, without being in the way of the hinges. Use all the screws supplied.

TIP! Ask a friend to press hard from the outside at the point where you drive the screw.

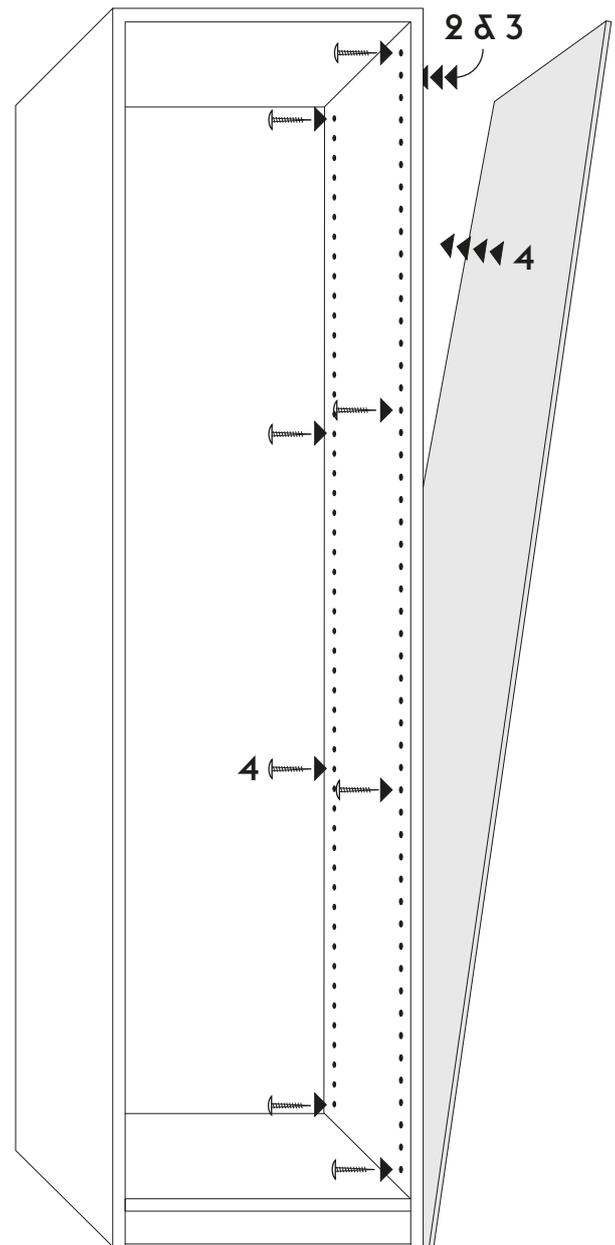

Safety!

Be sure to always follow the safety instructions that apply to your furniture. Always secure the cabinet to the wall. This also applies to low cabinets where the weight distribution changes drastically when the fronts open. Especially in the case of solid quality fronts as ours. Use the anchor brackets supplied with the Ikea cabinet.


Distribution of MountPads.

Here's how the MountPads should be distributed on the side of the cabinet frame.


Place them about 1 cm from the front and rear edge.

The same distribution applies regardless of the depth of the frame.

NOTE! Don't forget to wipe the surfaces with the supplied 3M wet wipe before mounting.

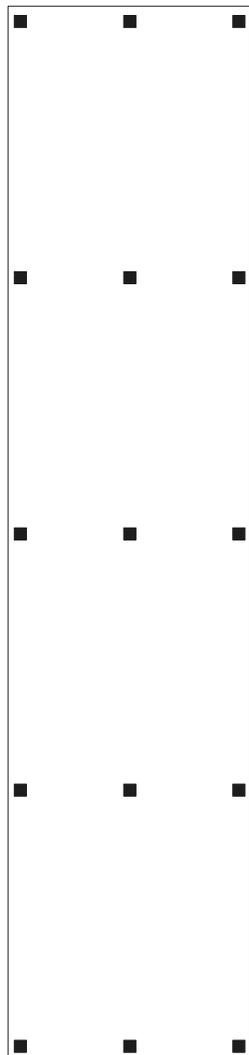

201cm tall side

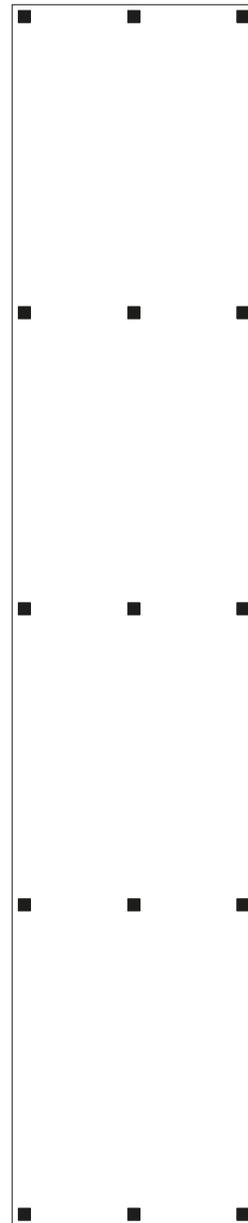

236cm tall side

Safety!

Be sure to always follow the safety instructions that apply to your furniture. Always secure the cabinet to the wall. This also applies to low cabinets where the weight distribution changes drastically when the fronts open. Especially in the case of solid quality fronts as ours. Use the anchor brackets supplied with the Ikea cabinet.